

CLICK HERE



Type device model ie. S10



Favourites



All categories



New



Most chosen



History



Designs

del ie. S10



Ask for designs



Video instructions



FAQ



Support contact




Upgrades



Report errors



Settings

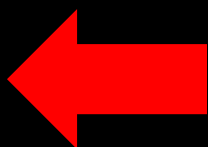

**CLICK ON
SETTINGS**

Version: v2.0.57

License: UA8HZ6ATGLSCD66

Deviceld: 4JPNU19304118905

[4JPNU19304118905]


EXIT APPLICATION






Settings

Language

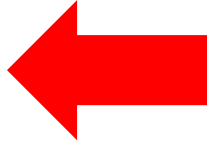


TO CHANGE LANGUAGE

Communication

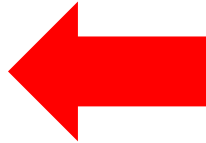

TO SELECT THE CONNECTION WITH
THE PLOTTER: VIA CABLE OR VIA
BLUETOOTH

Other

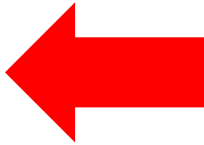


TO SELECT THE NORMAL OR
ADHESIVE CUTTING MAT



Settings

Language

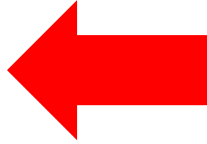

TO CHANGE LANGUAGE

Communication

Other



< Language



Polish



English



Russian



Spanish



Portuguese



Italian

**SELECT THE
FAVOURITE
LANGUAGE**



Deutsch




Hebrew



Settings

Language

Communication

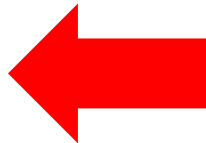

CLICK TO SELECT THE CONNECTION WITH THE PLOTTER: VIA CABLE OR VIA BLUETOOTH

Other




Settings

Language

Communication 

Other

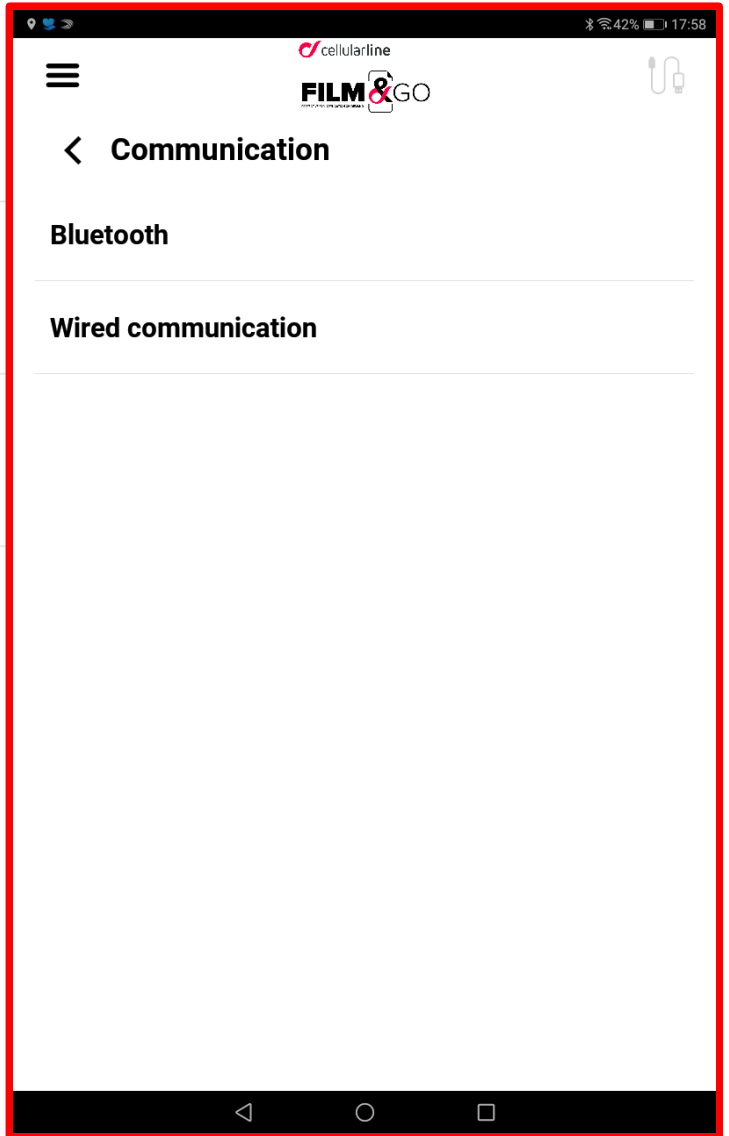



< Communication

Bluetooth

Wired communication



**TO CONNECT THE TABLET TO THE PLOTER
SELECT CABLE COMMUNICATION**

**CABLE COMMUNICATION IS RECOMMENDED
BECAUSE IT IS MORE STABLE.**




Settings

Language

Communication 


Other

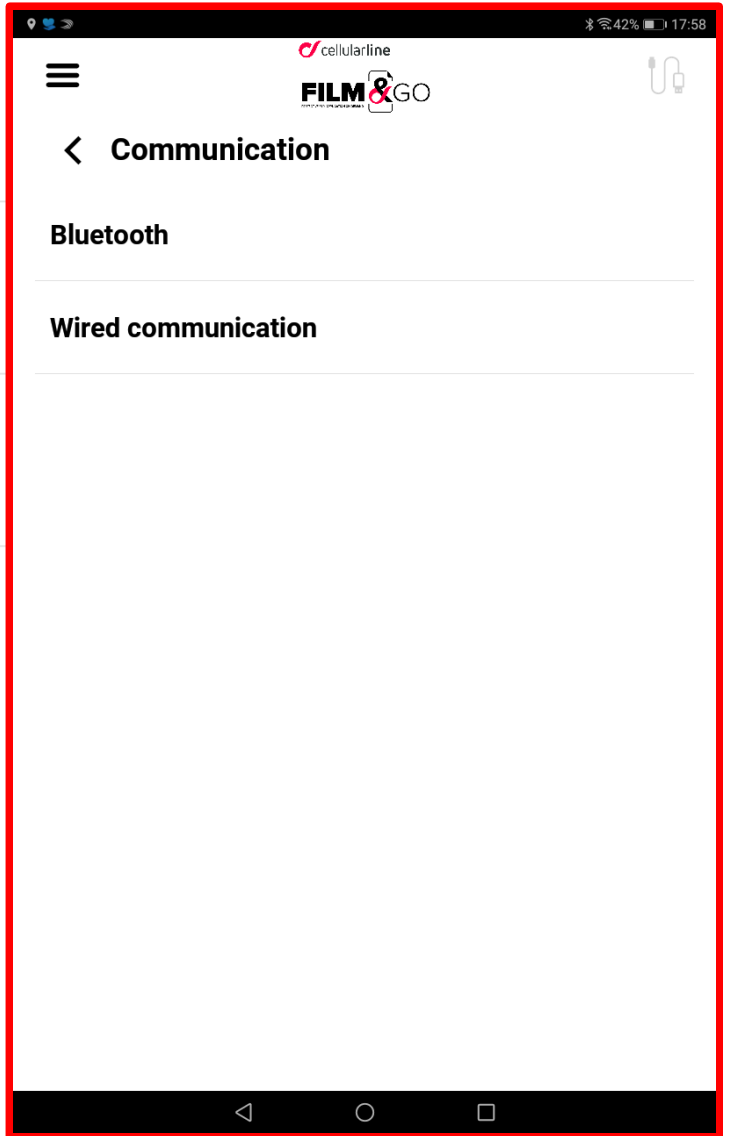



< Communication


Bluetooth

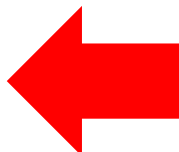

TO ACTIVATE THE BLUETOOTH CONNECTION FOLLOW THE NEXT STEPS


Wired communication

STEP 1: TURN ON THE BLUETOOTH ON THE PLOTTER

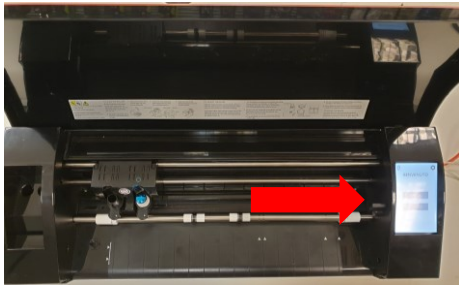


STANDARD PLOTTER


1. ACCESS THE PLOTTER'S SIDE SCREEN

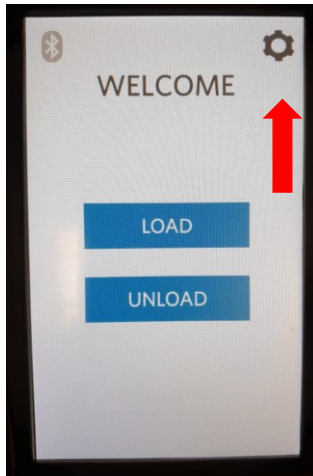


2. CLICK ON SETTINGS

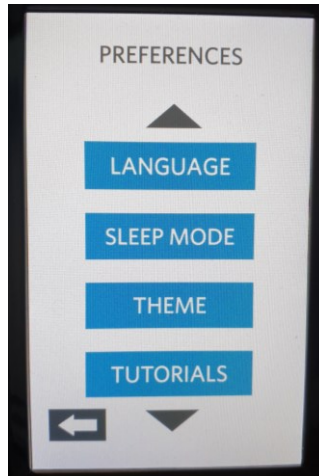

3. CHOOSE BLUETOOTH PREFERENCE

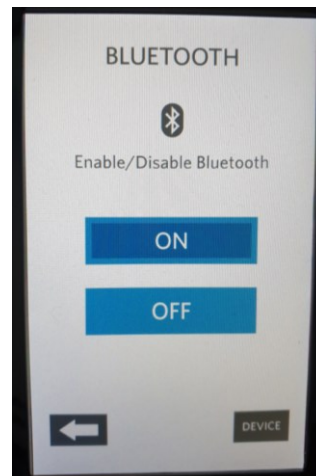

4. ENABLE BLUETOOTH FUNCTION

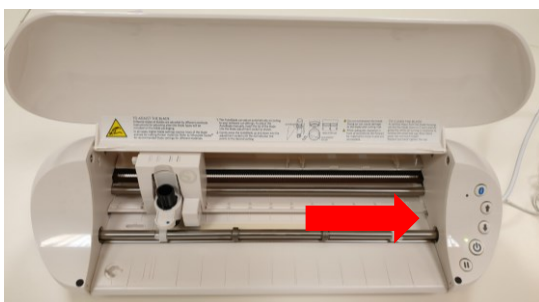

MINI PLOTTER

1. ACCESS THE RIGHT SECTION OF THE PLOTTER



2. CLICK ON THE BLUETOOTH BUTTON, MAKING SURE THE BLUE LIGHT TURNS ON

Impostazioni

Bluetooth

STEP 2



TURN ON BLUETOOTH AND VISIBILITY ON TABLET

Wi-Fi

Bluetooth

Dati mobili

Altro

Stile schermata Ho...

Display

Audio

Notifiche e barra di...

Tasto di navigazione

Blocco schermo

Sicurezza e privacy

Assistenza intelligen...

Non disturbare

Huawei ID

Account

Google

Bluetooth



Visibilità

Visibile a tutti i dispositivi Bluetooth vicini (01:53)



Nome dispositivo HUAWEI MediaPad T3 10 >

File ricevuti >

DISPOSITIVI ASSOCIATI

CAMEO3-153902R *i*

DISPOSITIVI DISPONIBILI

55:C8:F5:E4:AA:94 >

Impostazioni

Bluetooth

Cerca

Modalità aereo

Wi-Fi

Bluetooth

Dati mobili

Altro

Stile schermata Ho...

Display

Audio

Notifiche e barra di...

Tasto di navigazione

Blocco schermo

Sicurezza e privacy

Assistenza intelligen...

Non disturbare

Huawei ID

Account

Google

Bluetooth

Visibilità


Visibile a tutti i dispositivi Bluetooth vicini (01:53)

Nome dispositivo


HUAWEI MediaPad T3 10

File ricevuti

DISPOSITIVI ASSOCIATI

 CAMEO3-153902R **OK**

DISPOSITIVI DISPONIBILI

 55:C8:F5:E4:AA:94 **NO**

STEP 3



**SELECT
CAMEO3 (STANDARD PLOTTER)
OR
PORTRAIT(MINI PLOTTER)
AS DEVICE AND NOT AS BLUETOOTH**

Ricerca

Altro




Settings

Language

Communication



Other

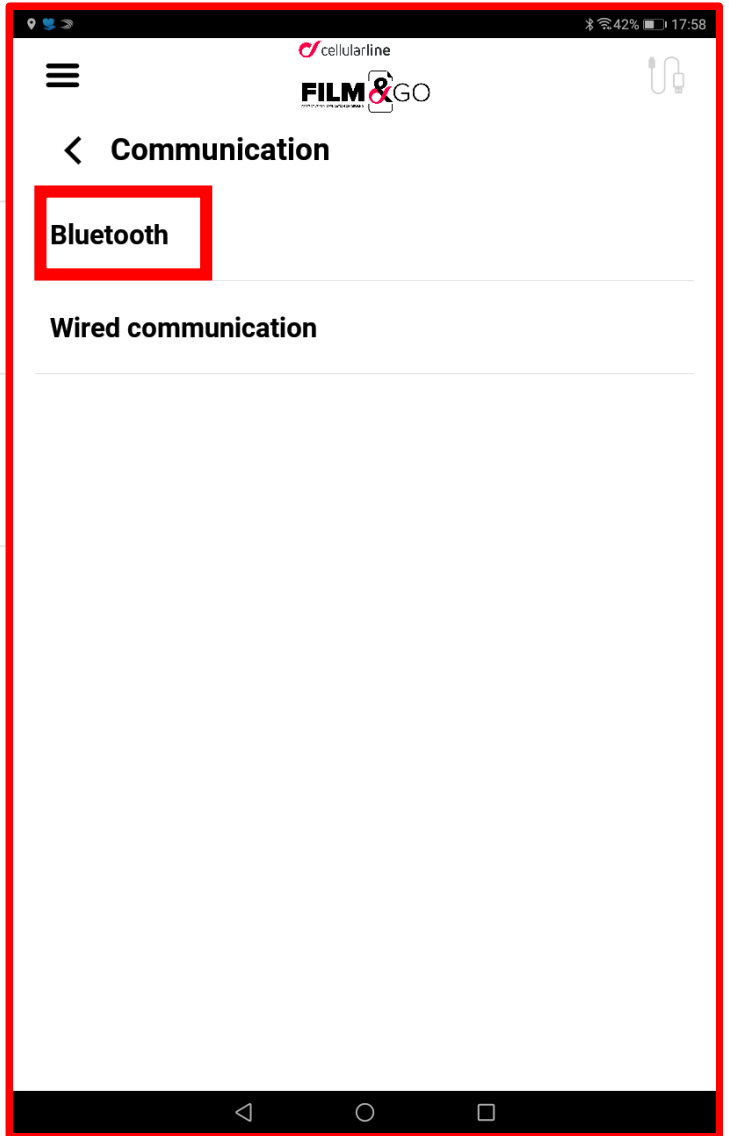



< Bluetooth

MINI PLOTTER NAME



PORTRAIT732902R - 00:1B:41:A6:7C:F2



CAMEO3732902R - 00:1B:41:A6:7C:F2




STANDARD PLOTTER NAME



SELECT THE PLOTTER TO CONNECT



 Type device model ie. S10



Favourites

IF THE BLUETOOTH IS CONNECTED THE BLUE LIGHT WILL BE ON



All categories

IF IT IS NOT CONNECTED THE ICON IS GRAY



New



Most chosen



History




Settings

Language

Communication

Other

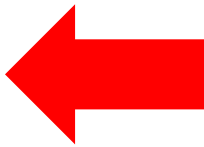

**TO SELECT THE NORMAL OR
ADHESIVE CUTTING MAT**



< Other

Matt type

Normal **NORMAL CUTTING MAT**

Adhesive **ADHESIVE CUTTING MAT**



CHOOSE THE TYPE OF MAT